

Noises occur when using SSH-6

September, 2018

Noise may occur when SSH-6 is used under the following condition:

*** The volume knob of SSH-6 is set between 0 to 3.**

You can workaround this by setting the volume of SSH-6 to 3 or higher, but please contact our customer support should you wish to get an improved replacement unit.

We plan to start the replacement service early October.

We apologize for any inconvenience caused.